

CYCLOPS

LIGHTING

STROBE 1200

RGBW Outdoor LED Strobe

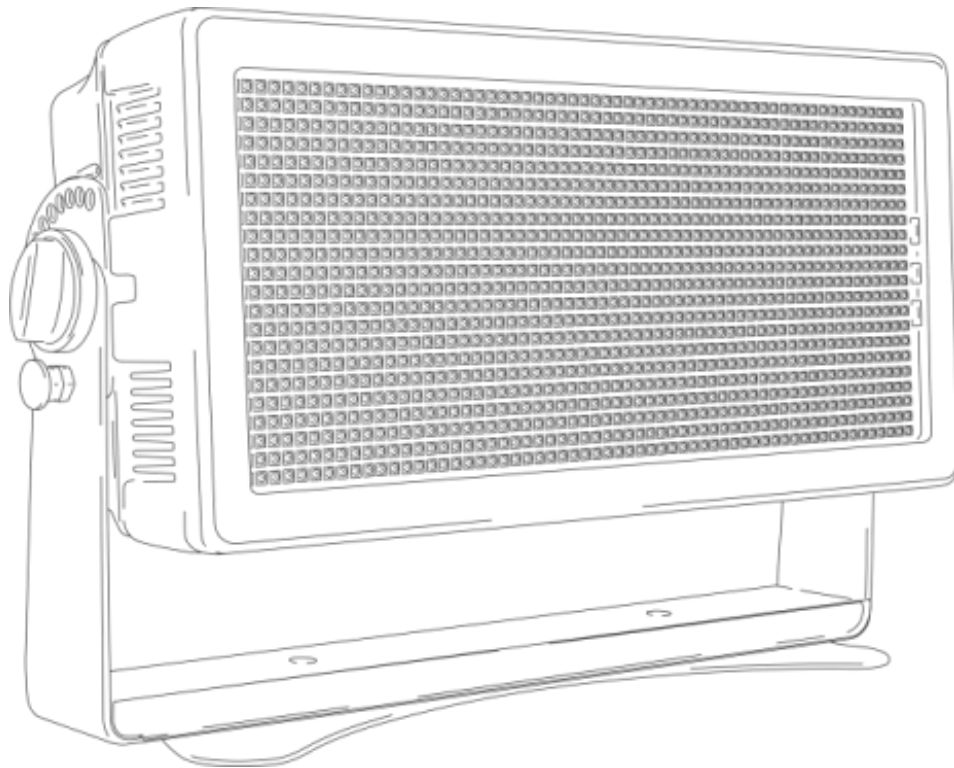


Table of contents

Safety information.....	02
Before using the product for the first time.....	04
Control menus.....	05
Menu description.....	05
DMX channel modes.....	07
Maintenance.....	09
CAUTION.....	10
Troubleshooting.....	11
Feature.....	12
Protection to fix card.....	13

SAFETY INFORMATION

To guard against electric shock

- Disconnect the fixture from AC power and allow the flash capacitor to discharge for 1 minute before changing the lamp or fuse, and when not in use.
- Do not remove the rear cover: there are no user-serviceable parts inside.
- Always ground (earth) the fixture electrically.
- Use only a source of AC power that complies with local building and electrical codes and has both overload and ground-fault protection.
- Do not expose the fixture to rain or moisture.
- Replace the lamp only as described or have it replaced by a Strobe service technician.

To guard against UV radiation, burns, and fire

Never operate the fixture with the front glass open, missing or damaged.

- Do not stare directly into the light. Never look at an exposed lamp while it is lit.
- Replace the lamp when it becomes defective or worn out.
- When replacing the lamp, allow the fixture to cool for at least 10 minutes before opening the fixture or removing the lamp.
- Never attempt to bypass the fuse. Always replace defective fuses with ones of the specified type and rating.
- Verify that the power feed cable is rated for the current draw of all connected fixtures.

- Keep all combustible materials (for example fabric, wood,
- Do not illuminate surfaces within 1 meter (39 inches)
- Provide a minimum clearance of 0.1 meters (4 inches) around air vents.
- Never place filters or other materials over the front glass cover.
- The exterior of the fixture can reach temperatures up to 120° C (248° F).
- Allow the fixture to cool for at least 15 minutes before handling.
- Ensure that any supporting structure and/or hardware used can hold at least 10 times the weight of all the devices they support.
- If suspending from a rigging structure, fasten the fixture to a rigging clamp. Do not use safety cables as the primary means of support.
- Check that all external covers and rigging hardware are securely fastened.
- Block access below the work area and work from a stable platform whenever installing, servicing or moving the fixtures.
- Do not operate the fixture with missing or damaged covers, shields or any optical component.
- Do not modify the fixture or install other than genuine RUSH.

Before using the product for the first time

1. Read safety information before installing, powering, operating or servicing the fixture.
2. Unpack and ensure that there is no transportation damage before using the fixture. Never attempt to operate a damaged fixture.
3. If the fixture is not going to be hard-wired to a mains supply, attach a local power plug (not supplied) to the end of the supplied power cable.
4. Before operating, ensure that the voltage and frequency of the power supply match the power requirements of the fixture. (See specifications on the last.)

Physical installation


The fixture is designed for indoor use only and must be used in a dry location with adequate ventilation. Always ensure that none of the fixture's ventilation slots are blocked and always ensure that the product is firmly affixed to avoid vibration during operation.

The fixture can be oriented at any angle. Ensure that the mounting surfaces and hardware can support at least 10 times the weight of all fixtures and equipment to be installed on them.

Control Menus:The main function are shown below,

Menu	Address	UP	0~512	
		DOWN	512~0	
	Channel	7/8/13/15/31 optional, press ENTER button to confirm.		
	Monitor	CH1-7/1-8/1-13/1-15/1-31		
	Auto	Auto 00- Auto 36		
	Effect Auto	On	Dimmer	Value 0-225
			Strobe	Speed 0-225
	Mas mode	No		
		Yes	Slave	
			Master	
	Back.L	ON/60S/120S/300S		
	Temp	Temp1		
		Temp2		
	Info	Test1	Test2	
		Reset	Version	
Dimmer curve	Curve 0-3			
Dimmer control	Speed 0-7			

Menu Description

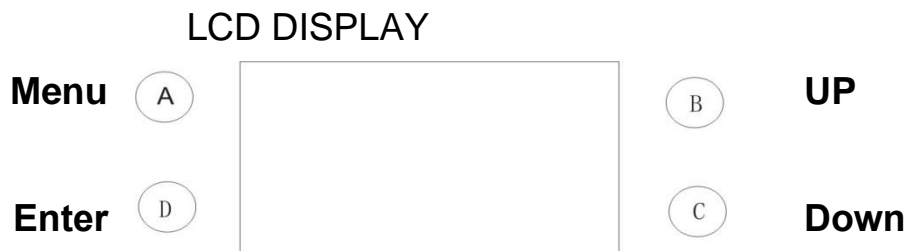

When you press the “Model” button, it will give you some information to choose.

DMX ADD.: Set DMX address

Push the UP or DOWN to choose the DMX Address from 001-512, or 512-001, and push ENTER to confirm.

This function is used to set or adjust the fixture’s starting DMX address.

Every device controlled by DMX has to have a unique starting address.

The addressing feature is what allows DMX to function properly.

The DMX address of a fixture is what allows it to communicate with a controller properly.

Channel: Choose the different channels

This function allows you to choose the DMX Channel, there are 5 kinds of DMX Channels: 7DMX Channel, 8 DMX Channel, 13DMX Channel, 15CH and 31CH, the UP or DOWN button to choose the mode, and push ENTER to confirm.

Auto Run.

You can choose different Auto-run Model from 00 to 36, each number has represented one effect, when you have made a choice

of one, press the ENTER button to choose its speed, push the UP or DOWN button to lift the speed of strobe running.

PS: This mode is on the condition of Auto-run Mode.

The sensitivity adjustment of the strobe could be from 001-255, push the UP or DOWN to add the level of sensitivity to the device.

PS: 001 is the highest one, on the opposite, 255 is the lowest.

Strobe:

It can work as a strobe instead of natural light, flash rate can be from 1-25 times per second.

LED Temp.

It allows to display some details about the functionality of the card/cards and LEDs:

Current: Instantly detected operating temperature

Maximum: Maximum detected temperature

Minimum: Minimum detected temperature

Temperature Control:

When the surface temperature of strobe is higher than 75°C, it will gradually become darker than before, the lightness could be no more than 20% full lighting.

DMX CHANNEL:

7 DMX Channel:

Channel	DMX Value	Description
Channel 1	0 ~ 255	Dimmer
Channel 2	0 ~ 255	Intensity of Flash
Channel 3	0 ~ 255	Flash
Channel 4	0 ~ 255	Random strobe
Channel 5	0 ~ 255	Special effect
Channel 6	0 ~ 255	Speed of effect
Channel 7	0 ~ 255	Color presets

8 Channel:

Channel	DMX Value	Description
Channel 1	001-255	Dimmer
Channel 2	001-255	Red
Channel 3	001-255	Green
Channel 4	001-255	Blue
Channel 5	001-255	White
Channel 6	001-255	Intensity of Flash
Channel 7	001-255	Special effect
Channel 8	001-255	Speed of effect

13 Channel:

Channel	DMX Value	Description
Channel 1	001~255	Dimmer
Channel 2	001~255	Red
Channel 3	001~255	Green
Channel 4	001~255	Blue
Channel 5	001~255	White
Channel 6	001~255	Flash
Channel 7	001~255	Special effect
Channel 8	001~255	Speed of effect
Channel 9	001~255	Color presets
Channel 10	001~255	Red background
Channel 11	001~255	Green background
Channel 12	001~255	Blue background
Channel 13	001~255	White background

15 Channel:

Channel	DMX Value	Description
Channel 1	001~255	Dimmer
Channel 2	001~255	Red
Channel 3	001~255	Green
Channel 4	001~255	Blue
Channel 5	001~255	White
Channel 6	001~255	Intensity of Flash
Channel 7	001~255	Flash
Channel 8	001~255	Random strobe
Channel 9	001~255	Special effect
Channel 10	001~255	Speed of effect
Channel 11	001~255	Color presets
Channel 12	001~255	Red background
Channel 13	001~255	Green background

15Channel:

Channel	DMX Value	Description
Channel 14	001~255	Blue background
Channel 15	001~255	White background

31 Channel:

Channel	DMX Value	Description
Channel 1	001~255	Dimmer
Channel 2	001~255	Red1
Channel 3	001~255	Green1
Channel 4	001~255	Blue1
Channel 5	001~255	White1
.....
Channel 22	001~255	Red6
Channel 23	001~255	Green6
Channel 24	001~255	Blue6
Channel 25	001~255	White6
Channel 26	001~255	Intensity of Flash
Channel 27	001~255	Flash
Channel 28	001~255	Random strobe
Channel 29	001~255	Special effect
Channel30	001~255	Speed of effect
Channel31	001~255	Color presets

CLEANING AND MAINTENANCE

The following points have to be considered during the inspection:

- 1.All screws for installing the devices or parts of the device have to be tightly connected and must not be corroded.
- 2.There must not be any deformations on the housing, color lenses, fixations and installation spots (ceiling, suspension, trussing).
- 3.Mechanically moved parts must not show any traces of wearing and must not rotate with unbalances.



CAUTION!

Disconnect from mains before starting maintenance operation.

DMX cables and connections to ensure the integrity of the physical network.

In order to make the lights in good condition and extend the life time, we suggest a regular cleaning to the lights.

- 1) Clean the inside and outside lens each week to avoid the weakness of the lights due to accumulation of dust.
- 2) Clean the fan each week.
- 3) A detailed electric check by approved electrical engineer each three month, make sure that the circuit contacts are in good condition, prevent the poor contact of circuit from overheating
- 4) The cleaning of external optical lenses must be carried out periodically to optimize light output. Cleaning schedules for lighting fixtures vary greatly depending on the operating environment.
- 5) It is therefore impossible to specify precise cleaning intervals for the fixture, environmental factors that may result in a need for frequent cleaning include:

A: Use of smoke or fog machines.

B: High airflow rates (near air conditioning vents, for example.)

C: Presence of cigarette smoke.

D: Airborne dust (from stage effects, building structures and fittings or the natural environment at outdoor events, for example.

- 6) Use gentle pressure only when cleaning, and work in a clean, well-lit area. Do not use any product that contains solvents or abrasives, as these can cause surface damage.

Troubleshooting:

This section describes a few common problems that may occur during operation and provides some suggestions for easy troubleshooting.

A. Lights can't work, no lights out

1. Check power connection, the fuse whether is ok.
2. Check power input whether correct.

B. Can't DMX control.

1. DMX signal indicator must be on, if not, check the DMX cable.
2. If DMX signal is OK, check the DMX address whether set OK.
3. If DMX signal not consistent, check the DMX port connect.

C. Sound activation does not work

Potential cause: the fixture does not react to the beat of music.

Remedies: Ensure that fixture is not connected to a DMX signal

Tap the microphone to ensure that it is functioning, the fixture should react when in sound activation mode.

D. Fixture does not respond to DMX control

Potential cause: fault in the DMX network due to connector or cable damaged, or incorrect DMX addressing, or potential interference from proximity to a high voltage installation.

Remedies: Check that the fixture DMX LED is on, and if not, check all

Feature:

Voltage: AC110-240V 50/60Hz

Lamp: 1320pcs RGBW SMD LEDs.

Channels: 7/8/13/15/31 CH optional

Mode: Sound Control, DMX 512, Master/Slaver, Auto run.

Power: 1500W DMX Strobe Light

Packing Size: 490*285*160cm

Weight: 12.5KG

Compact Design

DMX-512 protocol 0-100% dimming control

DMX512 channels for speed and dimming Special Functions:

Remark:

Errors and omissions for every information given in this manual except.

All information is subject to change without prior notice.